



SV-X70 SHOWER KIT

Poligono Industrial Foradada - 08580 - Sant Quirze de Besora (Barcelona)
Telf. 34-93.852.92.23, Fax.34-93.852.91.59
Export. Telf. 34-93.852.96.15, Fax.34-93.852.91.76
e-mail: saheco@saheco.com - web: www.saheco.com

MADE IN E.U.



**GRUPO
TORREMAT**



ENERO 2017


038060590

CALCULO ANCHO VIDRIO / Glass width calculation / Calcul de largeur de verre

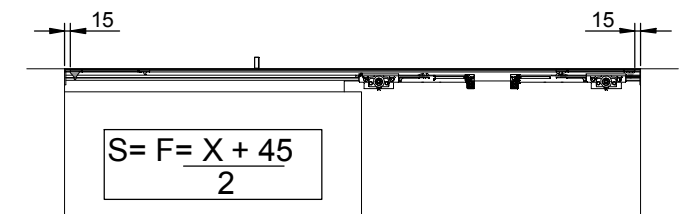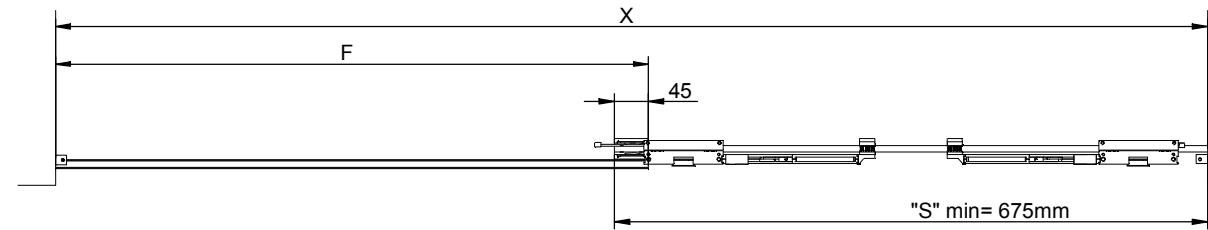

SHOWER 180°


(Z)		1
(Y)		1
(X)		1
(V)		1
(S)		1
(r)		1
(t)		1
1	 IZQUIERDA Left	1
	 DERECHA Right	1

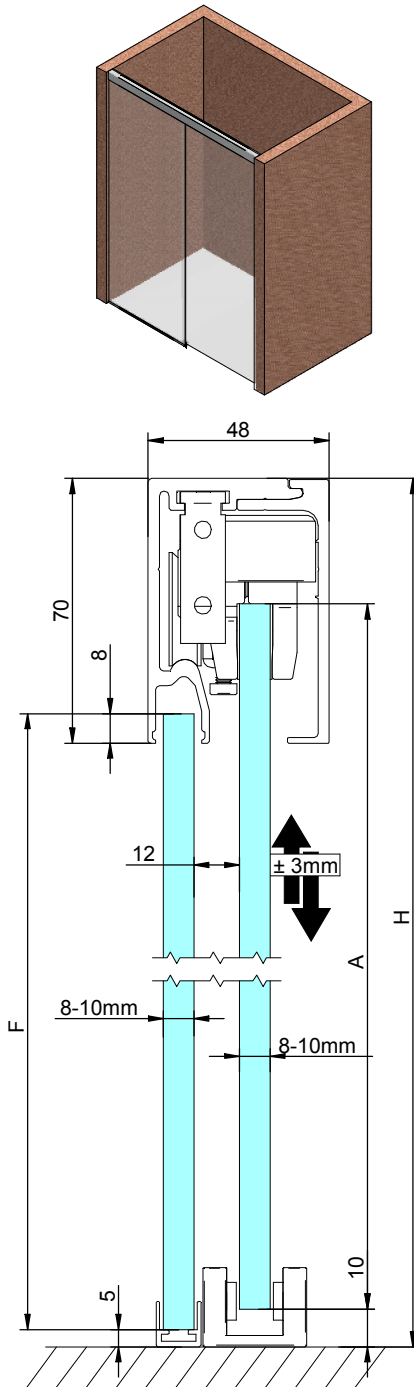


$$A = H - 43\text{mm}$$

$$F = H - 70\text{mm}$$

1

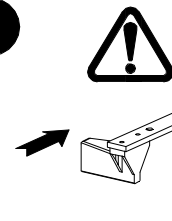

2

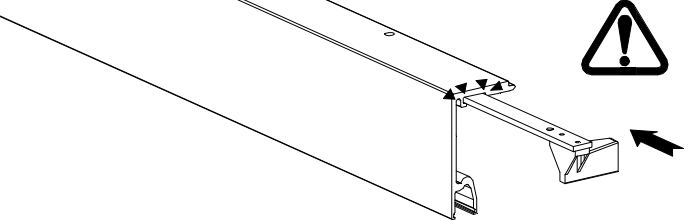


INSTALACIÓN ENRASADA / Leveled assembly / Mountage arasé

3a


INSTALACIÓN SOLAPADA / Overlap assembly / Mountage sournois

3b


4

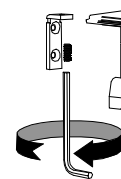




5



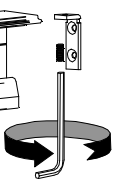


6

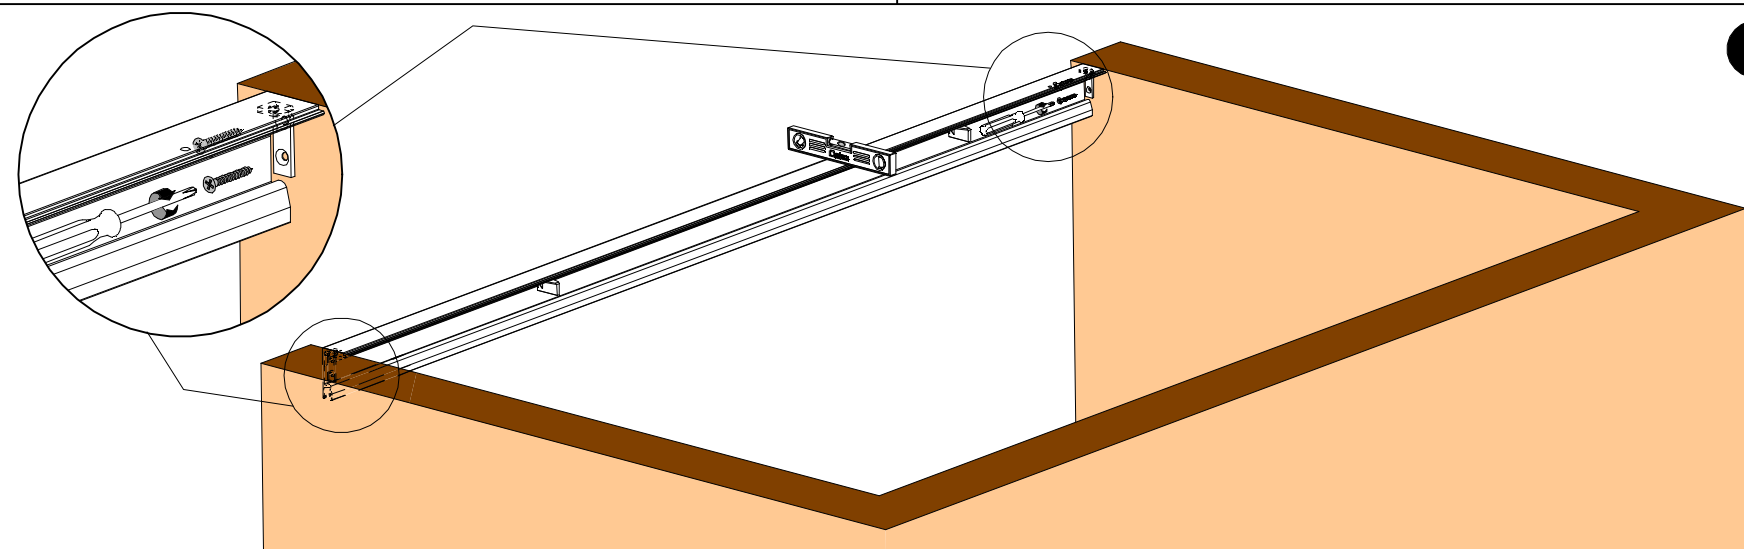

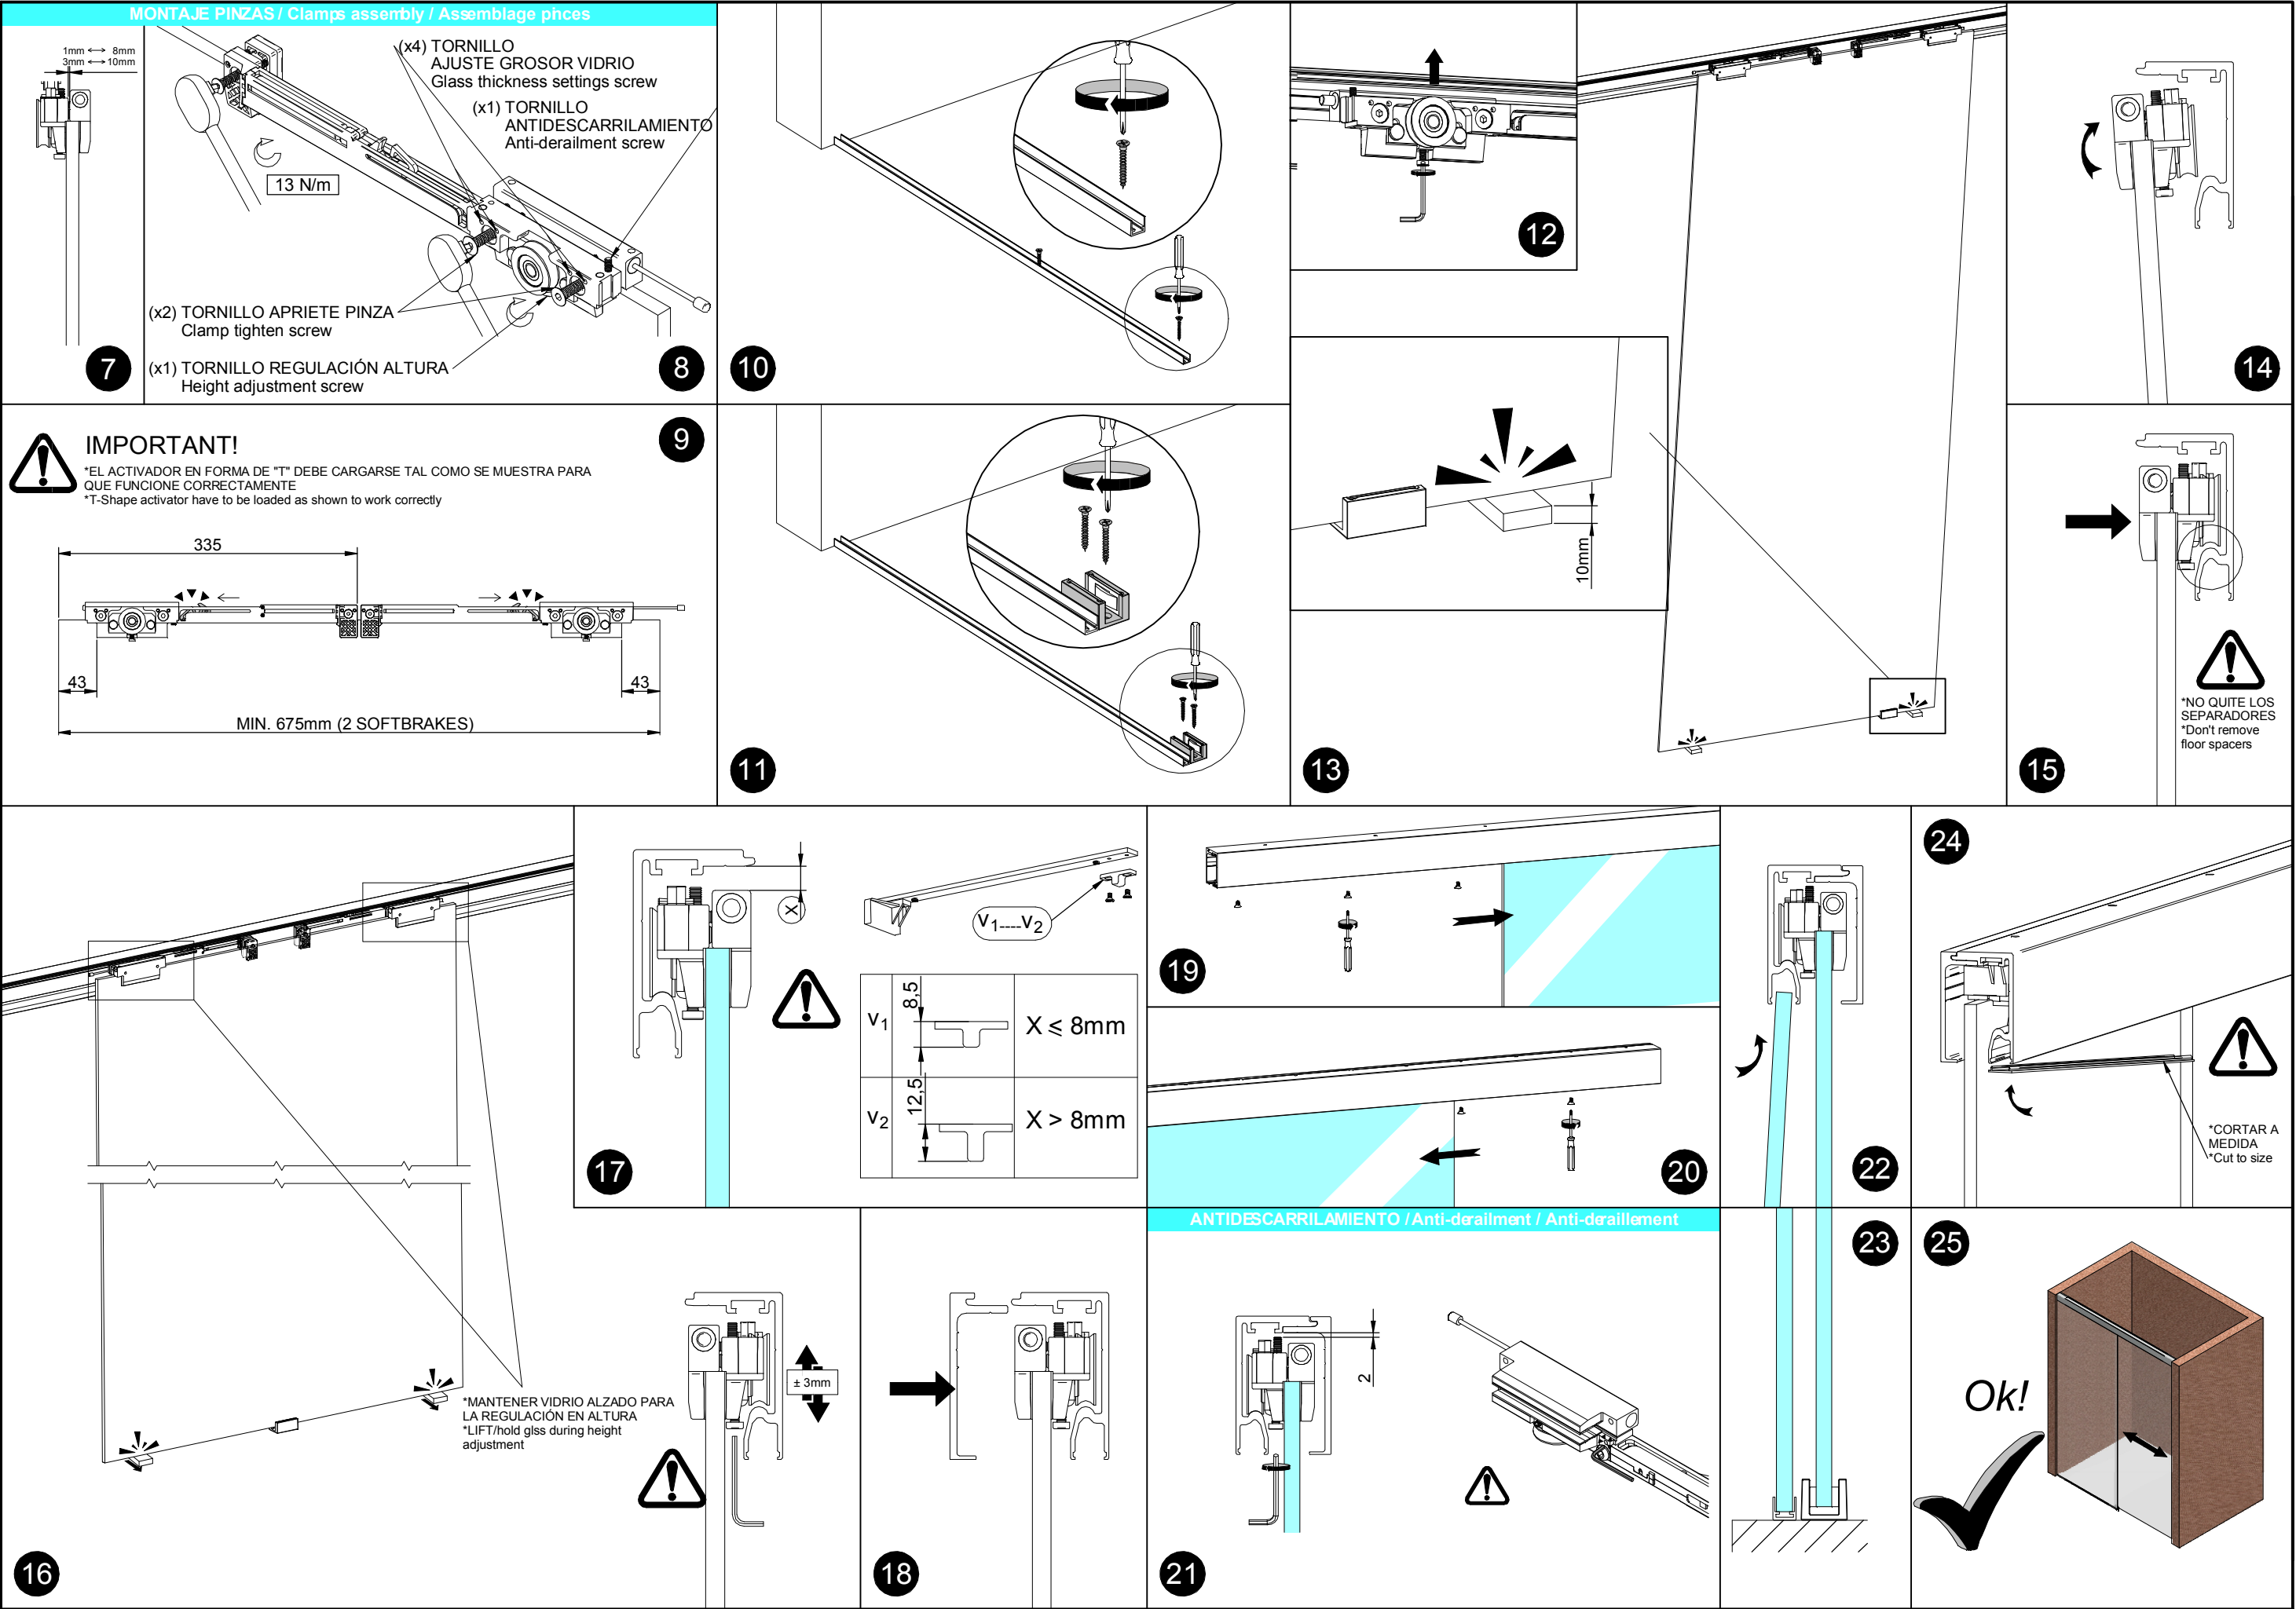

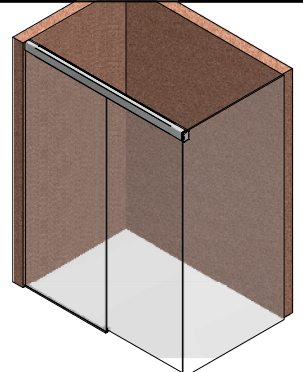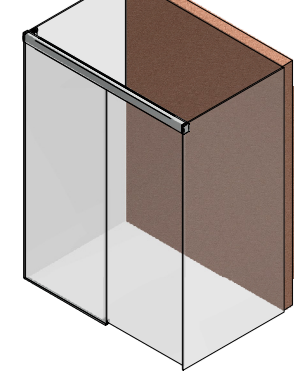INSTALATION WITH 90° KIT LEFT OR RIGHT (Not included with Kit)						SHOWER 90°
				 DERECHA Right	 IZQUIERDA Left	
1	1	1	1	1	1	
INSTALATION WITH 90° KIT LEFT + RIGHT (Not included with Kit)						SHOWER 90°
				 DERECHA Right	 IZQUIERDA Left	
2	2	2	2	1	1	

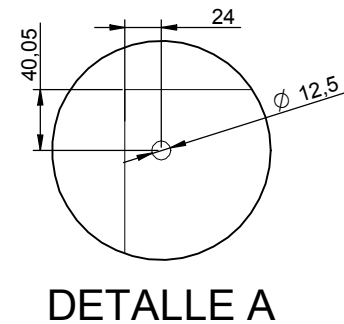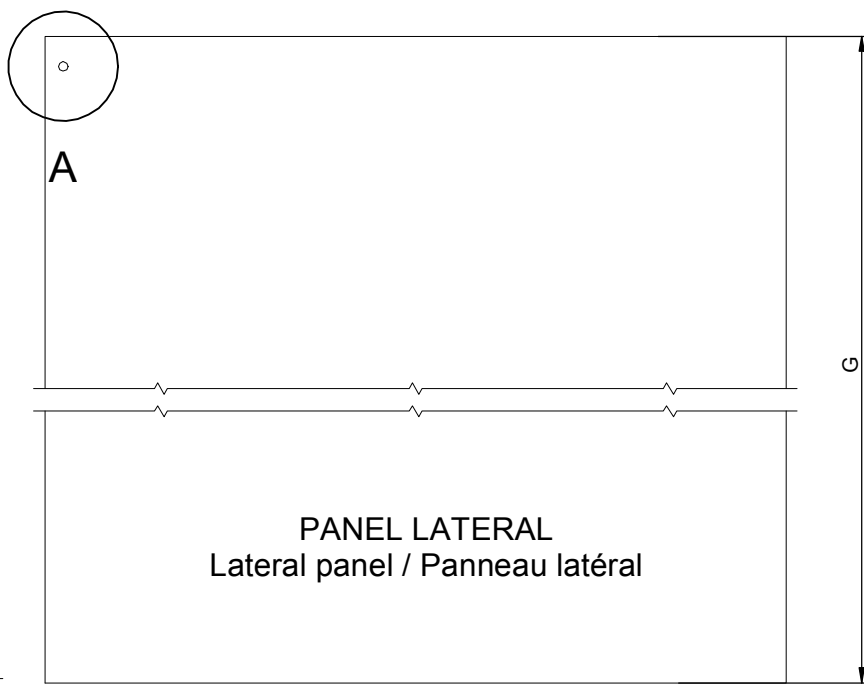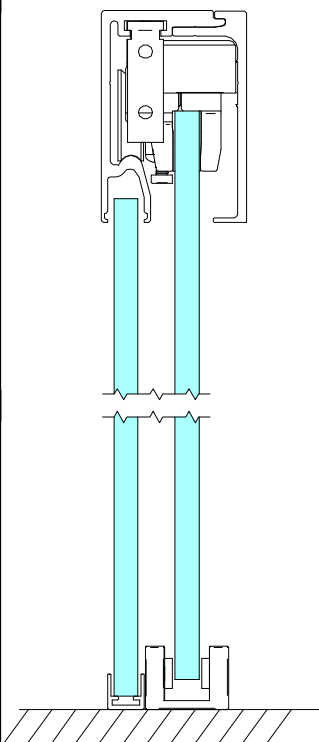

G= H
G= H

